

NAS 136

Controlling ASUSTOR Portal

Use the ASUSTOR Remote and
AiRemote to control ASUSTOR Portal

ASUSTOR COLLEGE

COURSE OBJECTIVES

Upon completion of this course you should be able to:

1. Use the ASUSTOR Remote and AiRemote to control ASUSTOR Portal, KODI/XBMC and Chrome.

PREREQUISITES

Course Prerequisites:

None

Students are expected to have a working knowledge of:

N/A

OUTLINE

1. Using the ASUSTOR Remote

1.1 Functionality with ASUSTOR Portal

1.2 Functionality with KODI/XBMC

1.3 Functionality during video playback with KODI/XBMC

1.4 Functionality with Chrome

2. Using AiRemote

2.1 Installing AiRemote and connecting to your ASUSTOR NAS

2.2 Basic modes of operation for AiRemote

2.3 AiRemote functionality with KODI/XBMC

2.4 AiRemote functionality with Chrome

1. Using the ASUSTOR Remote

1.1 Functionality with ASUSTOR Portal

The graphic below illustrates the key functions when using the ASUSTOR Remote with ASUSTOR Portal.



1.2 Functionality with KODI/XBMC

The graphic below illustrates the key functions when using the ASUSTOR Remote with KODI/XBMC.



1.3 Functionality during video playback with KODI/XBMC

The graphic below illustrates the key functions when using the ASUSTOR Remote during video playback with KODI/XBMC.



*If you call up the home screen, settings menu or any other menus during video playback, the function of this key will change back to the action described in section 1.2.

1.4 Functionality with Chrome

The graphic below illustrates the key functions when using the ASUSTOR Remote during web browsing with Chrome.



Note: The ASUSTOR Remote Control is suitable for use with AS-2TE/ AS-3/AS-6* series devices (Support XBMC) and AS31/50/51/61/62/70 series devices (Support KODI). If you wish to purchase an ASUSTOR Remote Control you may do so from your local ASUSTOR distributor or from the official ASUSTOR Accessories Store:

http://shop.asustor.com/index.php?route=product/product&path=61&product_id=50.

*AS-6 series users will need to purchase an additional infrared receiver in order to use the ASUSTOR Remote.

2. Using AiRemote

2.1 Installing AiRemote and connecting to your ASUSTOR NAS

STEP 1

- ✓ Locate and install AiRemote by scanning the QR codes below or by searching for AiRemote in the Apple App Store or Google Play.

Android



iOS



STEP 2

- ✓ After installation has completed, open AiRemote on your mobile device.
- ✓ AiRemote will now scan your local network for ASUSTOR NAS devices. Select the NAS of your choice to connect to it. (You can also select [Connect via IP] and directly enter the IP address of the NAS you wish to connect to)

2.2 Basic modes of operation for AiRemote

AiRemote has two basic modes of operation:


- Remote Mode
Remote Mode functions much the same as a regular remote control, using the up, down, left, right and OK buttons to control ASUSTOR Portal.
- Touchpad Mode
Touchpad mode functions much the same as a touchpad on a laptop computer. It comes complete with simulated left and right mouse buttons that allow you to intuitively control ASUSTOR Portal.

The graphics below will illustrate the functionality of both modes of operation.




2.3 AiRemote functionality with KODI/XBMC

After opening KODI/XBMC from ASUSTOR Portal, the corresponding functions for KODI/XBMC will appear in the toolbar at the bottom of the AiRemote interface. The “Player” function will give you all the standard controls for playing video and music with KODI/XBMC. The “Player” interface and corresponding functions are illustrated in the graphic below.

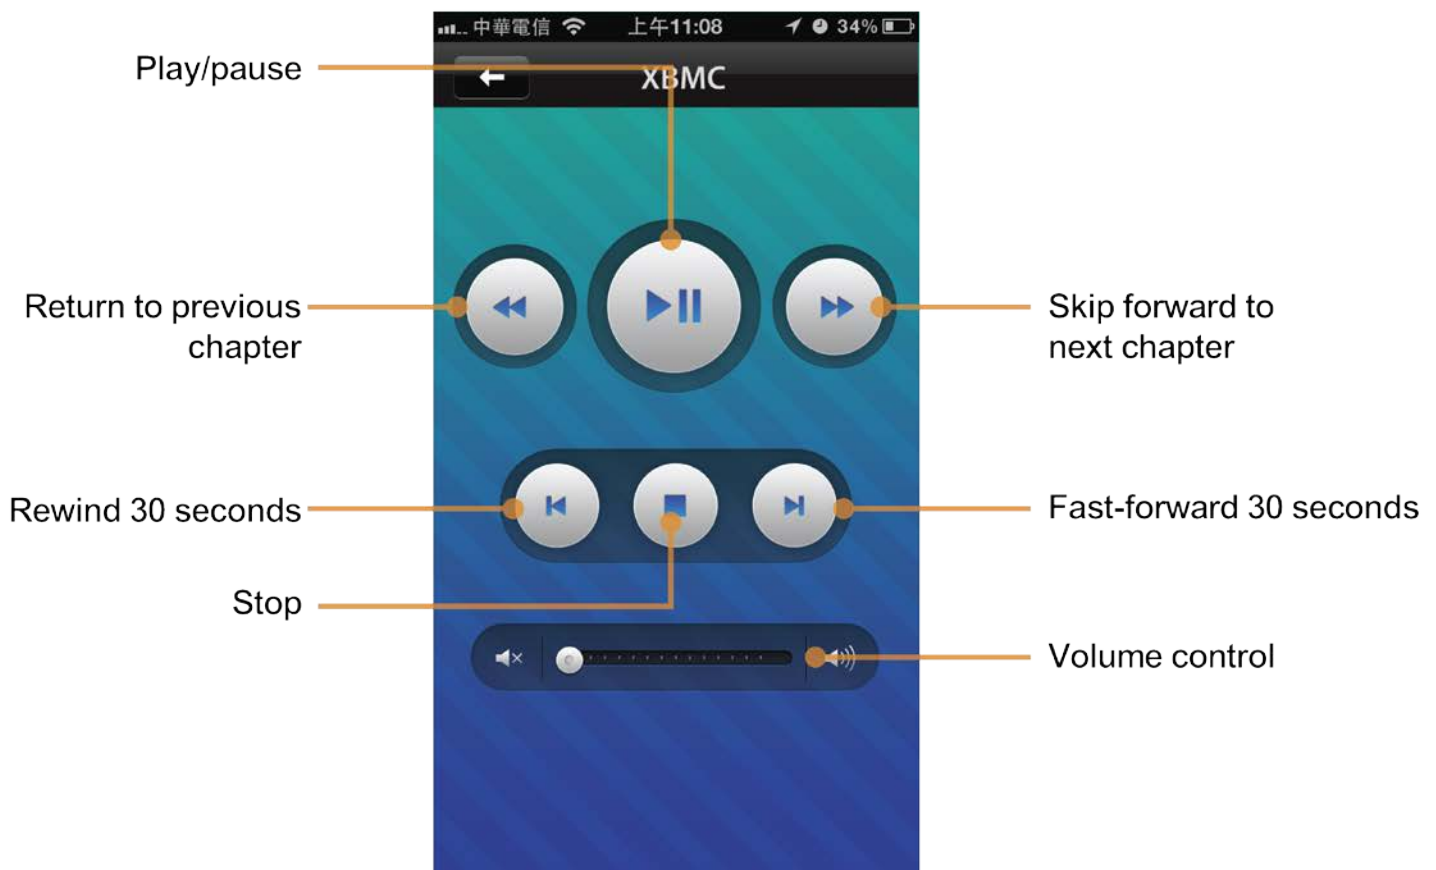

2.4 AiRemote functionality with Chrome

When using the Chrome web browser, switching to AiRemote's Touchpad Mode will provide you with a more intuitive usage experience. The graphic below illustrates the key functions when using Touchpad mode with Chrome.

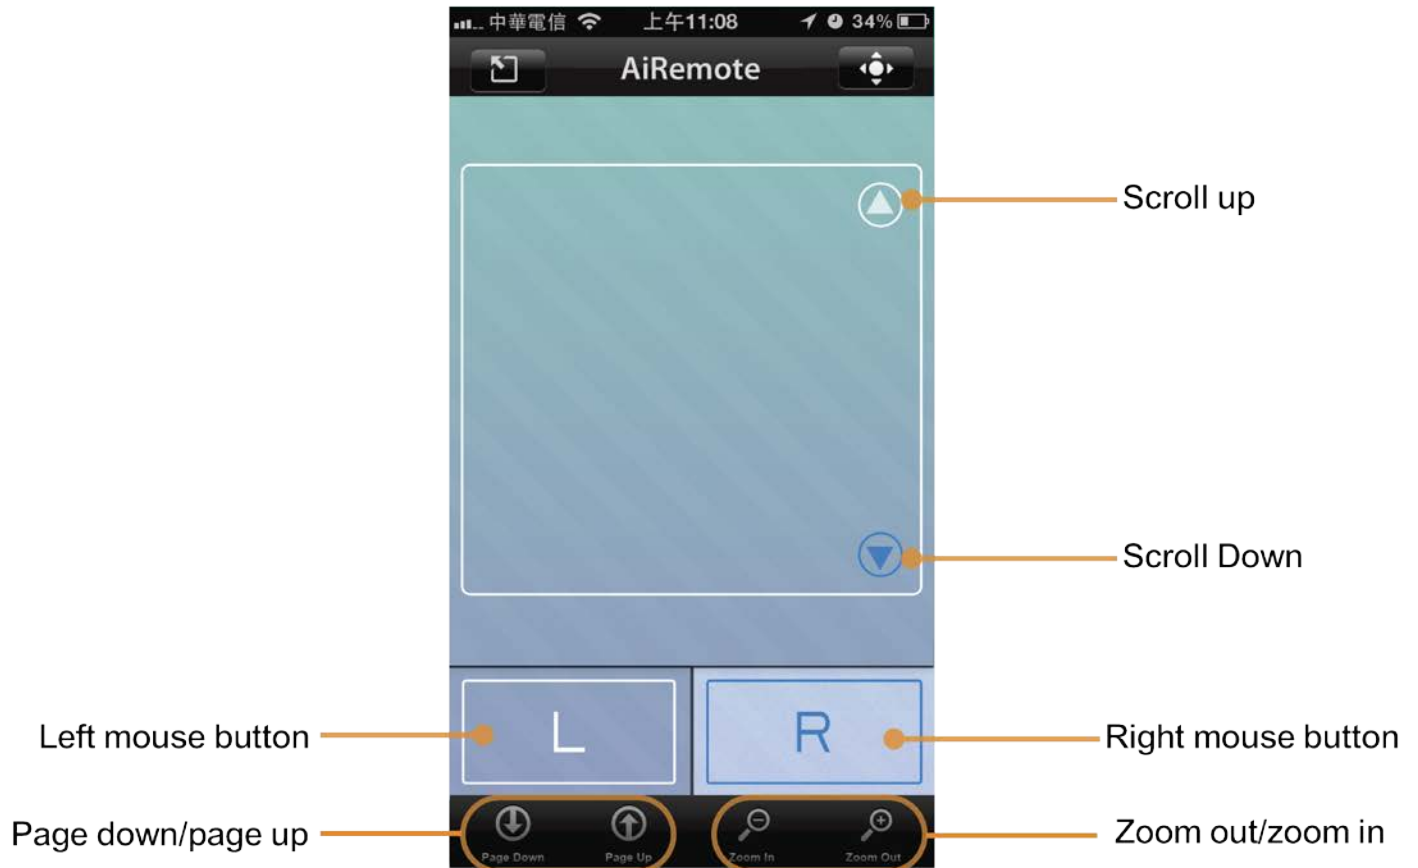

You can swipe left and right on the tool bar at the bottom of the screen to reveal more functions. Additional functions that are also offered when using Chrome are illustrated in the graphic below.

